
















								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010056	1345A060	4B10/4B12/4B11	DS010116	96287841	TU3MC2/TU3JPK	DS010141	5751.C3	TU1JP/TU3JP
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010142	5751.61	EW10J4	DS010144	5751.G8	EW10A/10LH3X	DS010147	5751.97	N6ATU5JP4
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010148	5751.E9	N6ATU5JP4/N6A10XA3A	DS010151	11287534398	N16B16A/N14B16A	DS010153	5751.86	9HZ/9HX/8HZ
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010181	1345A090	4B11/4J11/4J12	DS010339	5751.J0	EW10A/PFN	DS010346	11287598832	N16B16A/5G09
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010380	5751.20	LFW(XU7JP)/RFU	DS010381	5751.52	NFU	DS010424	5751.H9	N10LH3X/EW10A

								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010432	5751.51	TU5JP4	DS010448	0830.20	NFUTU5JP4/NFX	DS010462	5751.A0	PSARFN10
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS010507	7545958	EP6/EP8FDT	DS010587	16620-40020	1KR-FE	DS020048	1341A005	4B11/4B10
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS020117	5751.60	EW10J4/XU10J4R	DS020138	5751.98	N6ATU5JP4/N6A10XA	DS020166	1341A042	4B11/4B10
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS020167	1341A051	4B11/4B10	DS020204	0830.24	RHY(DW10TD)	DS020239	Y401-12-730	DV4D/8HT
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS030030	0829.C8	N6ATU5JP4	DS030031	0829.29	TU3JPK/TU5JP	DS030052	0829.90	HFZ(TU1JP)

								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS030053	0830.62	TU5JP4/N6A10FX3A	DS030054	0829.A7	EW10A/RFN	DS030055	0829.A9	EW10A/EW10J4
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS030056	0830.42	EW10A/EW10J4	DS030112	531088410	D4162T/9HJ	DS040008	13540-21010	1NZ-FE/2NZ
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS050035	F-554766.01	DRFD/DRFA/DRFB	DS050071	F-232369	4HX/RFJ	DS050104	F-229603.2	F6J/F6JB
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS050128	F-550426	RHR(DW10BTED4)	DS050157	F-238163	B6ZE/Z6/L3C1	DS050164	12317561555	N12B14A
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS050168	F-560565	N12B14A/N12B16A	DS050193	F-560968	5FW/5FS/8FS	DS050206	F-551759	DW10BTED4

								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS050227	535010310	F1CE0481D	DS060033	1201.E5	NFP/10FX3A	DS060034	9608564280	TU3A/TU3JP/TU3AF
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS060035	1201.K1	EW10A/EW10J	DS060101	11517550484	N16B16A/EP6FDTM	DS060202	1300A082	4B11/4J11
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS060220	9807485180	HN03/HN10	DS060283	1201.F6	XFU(ES9A)	DS060306	1201.H0	CFB(1KR)/1KR-FE
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS060547	1201.H7	224DT/4HN/Q4BA	DS070123	DS070123	N14B16A/N16B16AB	DS070124	DS070124	N12B16A/EP6
								
<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>	<b>DS No</b>	<b>OEM No</b>	<b>Engine</b>
DS070147	DS070147	EW10A/10LH3X	DS070149	DS070149	TU5JP4	DS070173	DS070173	EW10J4/RFN1

								
DS No	OEM No	Engine	DS No	OEM No	Engine	DS No	OEM No	Engine
DS070276	DS070276	TU3AF/TU5JPK	DS070383	DS070383	G4KD/G4KA	DS090003	DS090003	TU5JP4/JLC4G18
								
DS No	OEM No	Engine	DS No	OEM No	Engine	DS No	OEM No	Engine
DS090009	DS090009	/N6ATU5JP4	DS090014	DS090014	N6ATU5JP4	DS090038	DS090038	EW12J4/EW10J4
								
DS No	OEM No	Engine	DS No	OEM No	Application	DS No	OEM No	Application
DS120026	BMW8616153	N45B16A/N46B20B	DS130754	4007-V6	2A/C	DS130786	5105048AC	MK49
								
DS No	OEM No	Application	DS No	OEM No	Application	DS No	OEM No	Application
								
DS No	OEM No	Application	DS No	OEM No	Application	DS No	OEM No	Application